The Quencher

- This bottle may break when dropped. Bottle is pressure tested **GENERAL CARE** Silicone Stoper ASSEMBLY & USE but under excess pressure, the bottle may crack or distort. Wide opening - Please retain this information for future reference. - Before first use, wash all parts with warm soapy water. Rinse all parts thoroughly and allow time to dry. 1. Unlock the button (A1) by sliding the lock (A2) to the unlock - Contents should not be left in the container for longer than 24 hours. Wash with clean water as soon as possible after 2. Open the cap (A3) by pressing the button (A1) to release. each use. Allow all parts to dry completely prior to next use 3. Remove lid (A) by twisting anticlockwise. or storage. 4. Wash all parts separately and re-assemble once completely Lockable lid - DO NOT use abrasive cleaners or scrubbers since they may Push button dull or damage the finish. 5. Fill container with contents. Do not overfill: leave 2-3cm of - DO NOT use bleach or cleaners containing chlorine on any space to avoid overflow. parts of the product. 6. Replace the lid (A) by twisting it clockwise. Ensure lid is tightly - Suitable for dishwasher use. Not suitable for use in a - Handle secured to avoid dripping in the cap, which can lead to kichna microwave. - DO NOT immerse or soak in water for prolonged periods of 7. Close cap (A3) by pushing back down until the button (A1) time. Residual liquids, food, or other contents may become trapped between product components, such as lid parts, 8. Lock the button (A1) by sliding the lock (A2) to the lock container parts, seals (flexible silicone band around lid CARE AND USE GUIDE and/or stopper), or straws (if present). Hand washing is position. VACUUM INSULATED recommended to ensure that all parts of the product are PP body STAINLESS STEEL BOTTLE thoroughly cleaned. - COLD DRINKS ONLY. For maximal thermal efficiency, pre-chill the product just prior to use by filling with cold tap water, attach lid, let stand for 5-10 minutes and empty water. Then fill it with your preferred contents and re-cover with lid to increase thermal efficiency. - DO NOT use with carbonated drinks or fill with alcohol or corrosive liquids. - DO NOT expose to open flame or high temperatures. A2 - Not recommended for use by children. - Regularly check for worn, damaged or missing silicone seal, which may otherwise cause leaks.